



Outdoor Emergency Wallpack w/ Photocell

Now available is the EnVision Outdoor Emergency Wallpack, w/ Photocell. Place these fixtures on walls outdoors to provide great emergency backup lighting. Since these fixtures are IP65 rated, place these outdoors without worry of rain damage. With a nickel cadmium battery and overcharge & over-discharge protection, the charging time for this fixture is 24 hours, with a discharge time or backup time of 90 minutes.

Detail Specification:

- Voltage: 120-277V 60Hz
- Output: 12W
- Operating Temp: 0° F ~ 104° F
- Dimensions: 13.36" x 3.73" x 4.52"
- UL-94V-0 Flame rating, fire-resistant
- Power Consumption: 4.8W Max
- 1000lm General Mode (190lm Emergency Mode)

Product Information:

- Super bright SMD LED
- Non-Dimmable
- Overcharge & Over-discharge protection
- IP65 Protection

Product	Watts	Accessories	Color	Warranty
L E D - E M - W P - 1 2 W - P C - B Z -				
1	2	3	4	5

1 Product LED-EM-WP Outdoor Emergency Wallpack w/ Photocell	2 Watts 12W 1,000lm	3 Accessories PC Photocell	3 Color BZ Bronze	4 Warranty (Blank) 5 Years (incl.) 10YR 10 Years
---	-------------------------------	--------------------------------------	-----------------------------	---

Specs and model numbers are subject to change with or without notice.

FEATURES

Overcharge Protection

Prevents the outdoor fixture from overcharging and over-discharging

Nickel Cadmium Battery

Discharge / Backup time: 90 Minutes
Charging Time: 24 Hours

Photo Sensor

Die-Cast Aluminum Housing

Super Bright COB LED

12W with 1000lm for general mode
and 190lm for emergency mode

Test Button



Specs and model numbers are subject to change with or without notice.

INSTALLATION:

WALL MOUNTING

NOTE: First turn off electricity


Step 1: Remove cover from fixture with a screwdriver

Step 2: Select working mode


Step 3: Electrical Connections - Make the proper supply wire connections, Connect L and N to building power supply.

Step 4: Pull out all the AC wires from the back of the fixture or top of the fixture for mounting (J-box not provided)



Step 5: Restore power and press test button. AC light will turn off

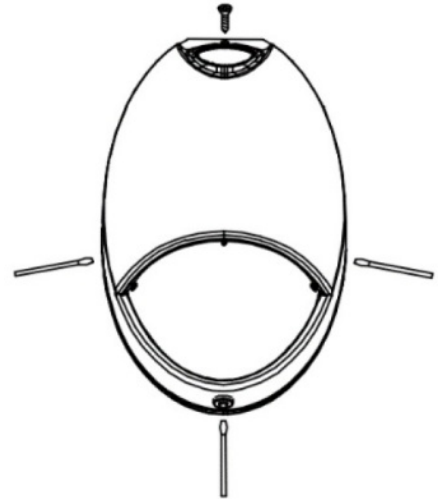

**PHOTO
SENSOR**

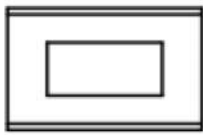


**WALL
SWITCH**

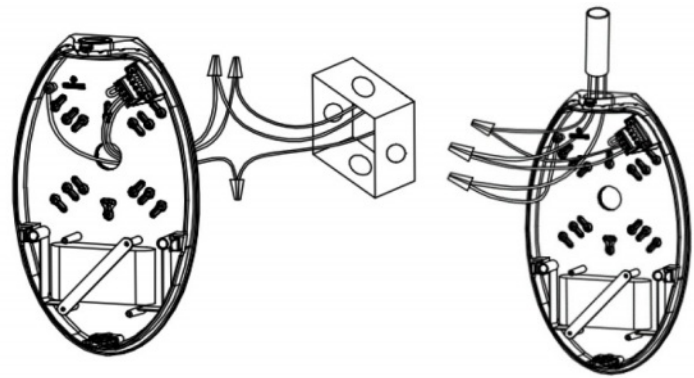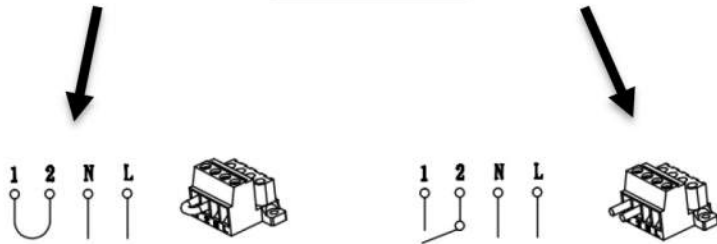

FUNCTION:


- 1) When AC connected, the green indicator will be on.
- 2) For normal lighting use, the fixture can be configured for automatic operation by the built-in daylight photo sensor, or can be switched through an external switch. For battery backup models the fixture will illuminate from battery power on loss of normal AC, regardless of the photo sensor or wall switch operation.
- 3) For photo sensor operation, connect the jumper between terminals 1 and 2 (Pic 2) and slide the slide switch (Pic 4) to the photo sensor position. The photo sensor will turn the fixture on and when the ambient lighting <10 Lux, and off when the ambient lighting >30 Lux.
- 4) For an external switch: remove the jumper between terminals 1 and 2 (Pic 3), and slide the slide switch (Pic 4) to the Wall Switch position. The external switch connections must be fully isolated from any other circuitry.

Photo Sensor Operation

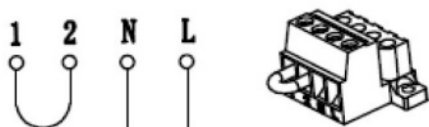


Pic 2

External Switch Operation

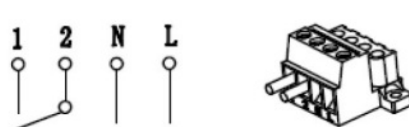

Pic 3

**PHOTO
SENSOR**  **WALL
SWITCH**

Pic 4